

DMX MASTER CONTROLLER ODX 400 PRO DATASHEET









Technicial Specifications

Operating Voltage	DC 5 V (EXT. Power Supply)
Operating Current	500mA
Power Consumption	2,50 W
Series	Pro
Interface	WEB Based
Connection	WiFi - Ethernet (Artnet)
Outputs DMX	4 x 3-Pin Screw Terminal
	4 X 512 Ch @40FPS
	4 X 1024 Ch @20FPS
Modes	Offline / File Player
	Online / ArtNet Reiciver
Memory	SD Card / 16GB
Remote	Builtin IR

Operating Temp.	-40° C ~ 85° C
Operating Humidity	≥5% - 95% RH
Antenna Socket	SMA
Protection Class	IP20
Dimensions	110x50x103 mm
Weight	0,325 Kg
Materiel	Aluminiyum
Body Color	Ral 9005







Dimensions





fied



Ports



	Port 1			Port 2	2	Port 3			Port 4		
GND	DATA -	DATA +	GND	DATA -	DATA +	GND	DATA -	DATA +	GND	DATA -	DATA +









BUTTON	LONG PRESS (5 sec.)	SHORT PRESS					
А	CLEAR WIFI CREDENTIALS	MEI	NU +				
В	WiFi ON/OFF	/OFF MENU -					
С	MODE ARNET RECEIVER / FILE PLAYER	**PLA`	Y/STOP				
D		*ARTNET UNIVERSE +	**NEXT FILE				
E		*ARTNET UNIVERSE -	**PREV. FILE				

* When device in ARTNET RECEIVER Mode "D" and "E" buttons changes output universes. Default output universes sets to 1-4.

Press "D" button once to chage output universes to 2-5, then 3-6, then 4-7 etc... Press "E" button once to chage output universes to 4-7 then 3-6, then 2-5 etc...

** Avaible when device in FILE PLAYER Mode "C" button PLAY/STOP current scene file from SDCard.

"D" and "E" buttons changes scene file from SDCard.



Factory Reset

Disconnect all connections from device. Press and hold "A" button then plug power. Device will start with factory settings.





LCD Display Menus



Common Menus

To browse between menus by pressing "A" (Menu +) or "B" (Menu -) buttons.



Displays device ID (Last 6 digit of Device ID is unique code and ID is diffrent for every device)

Displays WiFi IP when Dynamic mode

Displays WiFi IP when Static mode

Displays WiFi MAC address

Displays ethernet MAC address

Displays device ID (Last 6 digit of Device ID is unique code and diffrent for every device)

Displays device ID (Last 6 digit of Device ID is unique code and diffrent for every device)

Displays device embedded software's running version number

Network Connection Menus

Displays device connections status.



Both Ethernet and WiFi successfully connects to network

Ethernet successfully connects to network WiFi disconnects from network or device is in AP Mode

Ethernet disconnects from network WiFi successfully connects to network

Ethernet disconnects from network WiFi disconnects from network or device is in AP Mode





LCD Display Menus



ARTNet Slave Menus

When device in "ARTNet Slave" mode displays current status







LCD Display Menus



File Player Menus

When device in "File Player" mode displays players current status



Press "C" buttons to start/stop current scene data file.

Press "D" and "E" buttons navigate between next and previous scene data file.

fied





SETUP / Connection / WiFi (APMode)

- Make sure your product is plugged in and turned on
- Press "B" button 5 seconds.

- Device will open its build-in WiFi AP Mode and waiting to connect user.

- View available wireless networks from your computer.

- The WiFi network of the device will appear as "OLIPTEK_DEVICEID" among wireless networks as shown in the figure.

- Select this network to connect.

- Default WiFi SSID password : oliptek 123
- Default WiFi IP :192.168.4.1

(iii	OLIPTEK_DEVICEID No Internet, secured
	<u>Properties</u>
	Connect
(c.	Secured
(k.	Secured
(k.	Secured
(k.	Secured
G.	
Netv Chang	vork & Internet settings ge settings, such as making a connection metered.
ſ.	
WiFi	Flight mode hotspot

After connecting to WiFi network of the device, type http://192.168.4.1 in your web browser (Chrome, Opera, Safari etc.). Browser will displays "LOGIN" page.

Q = 0 × <t

Default Login password : 1234





1 In "Connection" page, click "Connect Device to WiFi" button.

		Q €	QŢ	۲. ۲	L	*	0 X :
1						Home	Logout
	WiFi Device is not connected to a network. Connection SSID Current IP0.0.0.0 Static IP Subnet Mask Default Gateway Connect Device To WiFi Direct Connection: HYDROZERO_19DE50						

- 2. A Click Your SSID
 - B Enter Your Password
 - C Click to "Connect" button.

	- 10 c 10 c	0 X
 B Courses B B Courses B Courses <li< td=""><td>Home</td><td>) Logout</td></li<>	Home) Logout





SETUP / Connection / Local WiFi Networks

3. Devcice will be reboot. Wait 10-20 seconds to conncet to local WiFi Network.

	3 W	iFi cre	diantials	has been chang 🗙	+																				-	o x
<	-	> (2 0	A Güvenli değ	il 192.168.4.1/wif	isave?s=	Ny ORDA		0.0	З¥у	n he	n he										4	Å	*		:
_		_							_	_	_												_			
																									Home	Logout
								WiFi Devi Plea	fiFis evice ease	i sett ice is se c	ttings is cor close	s char onnect e this	inged. ting to page a	the ne	ew net aconne	work ect over	the nev	w netwo	rk.							
l																										
I																										
l																										
l																										
I																										

- 4. When device connected to your local WiFi network,
 - Device will always connects your local WiFi network.
 - Until user; Perform "Factory Reset" Disconnect device manualy via "Connection" page. Clear WiFi Credentials by pressing "A" button 5 seconds Turn Off device WiFi by pressing "B" button 5 seconds

fied





SETUP / Connection / Ethernet

- Make sure your product is plugged in and turned on.

- Connect device and your computer to the same network via ethernet cable.

-The lights on the ethernet port of the device need to be lit



Orange static

- Assign correct network settings in Windows operating system as shown in figure

- Default static IP of Device
- : 192.168.8.10

ternet Protokolü Sürüm 4 (TCP/IPv4)) Özellikle	ri					Î
enel							
Ağınız destekliyorsa, IP ayarlarının otor sağlayabilirsiniz. Aksi halde, IP ayarlarır gerekir.	natik olara nız için ağ y	k a yö	netio	ma	ize l	baş	svurmanız
🔿 Otomatik olarak bir IP adresi al							
Aşağıdaki IP adresini kullan:							
IP adresi:	192		168		8	•	5
Alt ağ maskesi:	255		0		0		0
Varsayılan ağ geçidi:							
ODNS sunucu adresini otomatik olar	ak al						
Aşağıdaki DNS sunucu adreslerini l	kullan:						
Tercih edilen DNS sunucusu:		•					
Diğer DNS Sunucusu:							
🗌 Çıkarken ayarları doğrula					G	eliş	miş
		т.		~			÷l

After connecting to network , type http://192.168.8.10 in your web browser (Chrome, Opera, Safari etc.). Browser will displays "LOGIN" page.

Default Login password : 1234









SETUP / Connection / Change Default Static IP of Device

- In connection Page,

Type your preffered IP adress
Type Subnet Mask as
Type Default Gateway
Type DNS

(for example 192.168.8.11) 255.0.0.0 192.168.8.1 192.168.8.1

- Then press "Set Static IP" button.



Ethernet IP should appear; in the "Settings" screen on the web interface or

on the display of device under ETH IP menu.

ID	OLIPTEK 19D3B0	Version	DMX 800.242.12
Device Name	Paralises Int	Pass	100
Guest Pass	1000	AP Pass	and the second sec
Admin Mail		Send Feedback	ON
Start Mail	ON	Error Mail	ON
GW Coords		GW Mode	normal
Master IP		Slave Key	
EXTERNAL IP		SSID	Caracita
WIFI AP MAC	B8:D7:AB:19:D3:B1	WIFI STA MAC	B8:D7:AB:19:D3:B0
ETH MAC	B8D7AB19D3B3	ETH IP	192.168.1.11
SD	OK	SD Total	15549952
Date Time	1/8/2007 23:46:41 (RTC)	RSSI	100
Connected Clients	0	Memory	L106816 C106800
Operation Time	0d 00:40:01		
	Refres	h	

E	ГН	IP	(5	ΤA	T	Ι	$\langle \rangle$
	192	. 1	68	. 8		1	1





SETUP / MADRIX SETTINGS

- Start the MADRIX Software and go to 'Preferences.. -> Device Manager... -> tab 'Art-Net' and activate 'Enable'. Click on the search button loupe icon) and the device appears in the list.

Device Manager								×
DMX Devices	VI Device	es DMX Input A	rt-Net MIDI	I Audio				
Device Name	Count	Universe OUT	Univers	Long Name	IP Address / MAC Address		Enable	
ArtNet 0001		1, 2, 3, 4		ArtNet device nr 0001	192.168.8.10 (Send Only To Unicast Address 192.168.8.10)			
ArtNet 0003	4	1, 2, 3, 4		ArtNet device nr 0003	192.168.8.11 (Send Only To Unicast Address 192.168.8.11)		Artsync	
ArtNet 0004		1, 2, 3, 4		ArtNet device nr 0004	192.168.8.12 (Send Only To Unicast Address 192.168.8.12)		Pre-sync	
ArtNet 0005	4	1, 2, 3, 4	-	ArtNet device nr 0005	192.168.8.13 (Send Only To Unicast Address 192.168.8.13)			
							ArtAddre:	55
<						>	×	3
P 4	+	B -	00) HTTP	Hostname : DESKTOP-U433FR8		Count :	
G 🗄 🗆 🗤					ок	Apply	Can	cel

Art-Net Device Configuration	×
General	1
Manufacturer : Artistic Licence Engineering Ltd Website	١
Product: developer Firmware:v5.4	"
OEM Code: 0x00FF	
ESTA: 0x4941 - inoage GmbH	
Style Code: (0x00) node	
UUID: 40108ae4-dabb-4ebe-b9ee-e53800057615	
Short Name : ArtNet 0001 Manual ID : 1	
Long Name : ArtNet device nr 0001	
LED Status Indicators : Mute	
Part Count : 4	
State Port 1 Port 2 Port 3 Port 4	
0x0000 ArtNet 0x0001 ArtNet 0x0002 ArtNet 0x0003 ArtNet	
Universe Port IN :	
192.108.8.0 255.255.255.0 DU:3/:45:CF:D3:A8 100 MBR/s Sync Mode Enabled	4
Send Data Only 16 IP Address 192.108.8.10	
192 , 108 , 8 , 10 MAC 10 IP	
Port Address : 6454 0x1936	
OK Apply Cancel	







SETUP / MADRIX SETTINGS

- Go to 'Preferences...'->'Device Manager...' -> tab 'DMX Devices to configure the output. Activate 'Enable' for each required output port in the section 'Settings'.

State	Device Name	Universe	OUT / IN	ms / FPS	Frames
On	ArtNet 0001 (manual 1, 192.168.8.10) Port:0		OUT	10 / 100.0	Optimized
🔵 On	ArtNet 0001 (manual 1, 192.168.8.10) Port:1	1	OUT	10 / 100.0	Optimized
On	ArtNet 0001 (manual 1, 192.168.8.10) Port:2		оит	10 / 100.0	Optimized
🔵 On	ArtNet 0001 (manual 1, 192.168.8.10) Port:3	1	OUT	10 / 100.0	Optimized
🔵 On	ArtNet 0003 (manual 3, 192.168.8.11) Port:0		оит	10 / 100.0	Optimized
🔵 On	ArtNet 0003 (manual 3, 192.168.8.11) Port:1	1	OUT	10 / 100.0	Optimized
🔵 On	ArtNet 0003 (manual 3, 192.168.8.11) Port:2		оит	10 / 100.0	Optimized
😑 On	ArtNet 0003 (manual 3, 192.168.8.11) Port:3	1	OUT	10 / 100.0	Optimized
🔵 On	ArtNet 0004 (manual 4, 192.168.8.12) Port:0		OUT	10 / 100.0	Optimized
🔵 On	ArtNet 0004 (manual 4, 192.168.8.12) Port:1	1	OUT	10 / 100.0	Optimized
🔵 On	ArtNet 0004 (manual 4, 192.168.8.12) Port:2		оит	10 / 100.0	Optimized
😑 On	ArtNet 0004 (manual 4, 192.168.8.12) Port:3	1	OUT	10 / 100.0	Optimized
🔵 On	ArtNet 0005 (manual 5, 192.168.8.13) Port:0		оит	10 / 100.0	Optimized
🔵 On	ArtNet 0005 (manual 5, 192.168.8.13) Port:1	1	OUT	10 / 100.0	Optimized
🔵 On	ArtNet 0005 (manual 5, 192.168.8.13) Port:2		OUT	10 / 100.0	Optimized
😑 On	ArtNet 0005 (manual 5, 192.168.8.13) Port:3	1	OUT	10 / 100.0	Optimized
2 0	¥ 🖵 123···		Univers	es In Use OUT :	16/8 IN : 0 🕕







SETUP / MADRIX SETTINGS

- Configure your virtual LED matrix using "Preferences..." -> "Matrix Generator..." or "Patch Editor...".



